

# Installation Instruction

## Water Cooling Coil - ITS 184X0251M621

Valid from 2016.08.23

### Step 1:

Check if all shown parts are available



### Step 2:

Push the Flame Scanner into the Cooling Coil as shown on the picture.



### Step 3:

Place the flat spring on the top of the Flame Scanner.



### Step 4:

Put the cap over the Cooling Coil and tighten the three screws lightly.



### Step 5:

Fix the Flame Scanner as described in the manual and tighten the screws of the Cooling Coil with about 10 NM.



### Step 6:

Remove the protection covers and connect to the cooling water system and the PLC.



## Office Locations

Austria – Steyrermühl  
Tel: 0043 / (0)7613 / 44974 - 0  
Fax: 0043 / (0)7613 / 44974 - 20

Germany – Essen  
Tel: 0049 / (0)201 43728 - 0  
Fax: 0049 / (0)201 43728 - 20

Malaysia – Puchong  
Tel: 0060 3 8060 3178  
Fax: 0060 3 8060 7178

E-mail: [office@turbineservices.at](mailto:office@turbineservices.at)

Further informations on [www.turbineservices.at](http://www.turbineservices.at)

All information in this document was examined with due care, nevertheless no guarantee of the correctness and accuracy is given. Any claims or remedies, regardless of the legal theory they are based upon, shall be excluded.